

# UniCabby

New thinking in IT storage

## Instructions

Universal Device Charging  
& Storage Units

Featuring a unique Power Management system  
to reduce our environmental impact



UniCabby Series - 20H 32H 40H (40H USA only)

**To UNLOCK front doors** – turn the key located on top of the UniCabby, anti- clockwise according to diagram shown on lock moulding. (See Fig. 1)

**To UNLOCK rear door** – pull the hidden handle which is located on the underside of the top in the centre of the unit. (See Fig. 2)

**To LOCK front door** – ensure back door is closed securely, close the front door. Turn key located on top of the UniCabby, clockwise according to diagram on lock moulding. This locks both the front and back doors securely. Back door **MUST** be closed prior to locking the front door.


**To LOCK rear door** – close the rear door first, this will lock automatically.



UniCabby 20H



UniCabby 32H

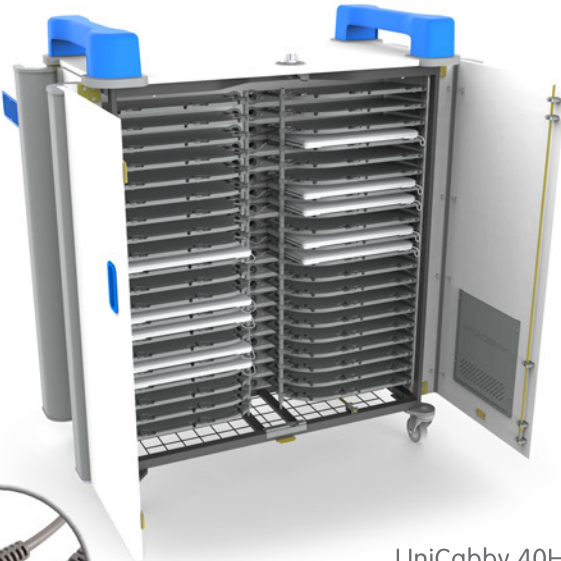

UniCabby 40H



Fig. 1



Fig. 2

**To install tablets into UniCabby:**

1. Plug your device adaptor into the rear of the trolley and place the adaptor block (if needed) into the adaptor tray. (See Fig. 3)
2. Feed the device cable through the cable port and onto the device tray. Excess cable can be tied off on the adaptor tray if required. (See Fig. 4)
3. Move around to the front of the trolley and take the device cable and feed this through the cable valley. Lock the cable into valley by turning the cable clips over the top of the device cable when it has been located in your required position. (See Fig. 5)
4. Each tray has 3 cable exit points which can be used to suit the device placed on the tray. Upon exiting the valley, ensure you leave enough cable to plug into the device power connection point. The device cable can be clipped into position again by turning the cable clip on the tray.
5. Plug the device cable into the device
6. Connect the UniCabby to the mains power supply using the supplied IEC cable (See Fig. 6)

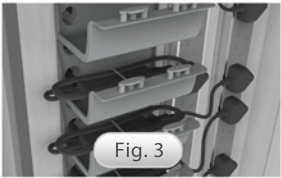


Fig. 3

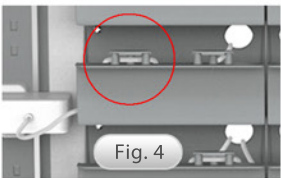


Fig. 4

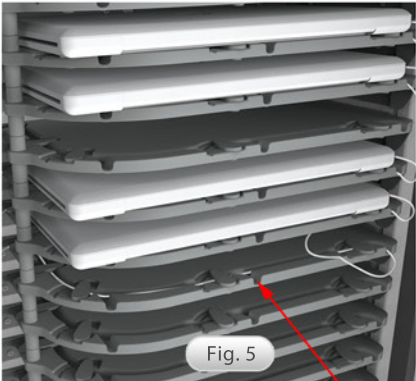


Fig. 5

Feed cable through the cable valley




Fig. 6

**Note:** Front 2 castors have lockable wheels. Lock when UniCabby is in position by pushing down on the castor foot plate.

## POWER 7 V2– Setting and Operating Instructions

**Important Note: All laptops must be switched off and closed before charging.**

When powering up the LapCabby / UniCabby for the first time, depending on your time zone, the unit might automatically enter a timing period, to ensure the LapCabby / UniCabby is in the correct time zone please follow the instructions below from item 2, or to reset 'Timers' follow instructions from 'Setting Timers' below.

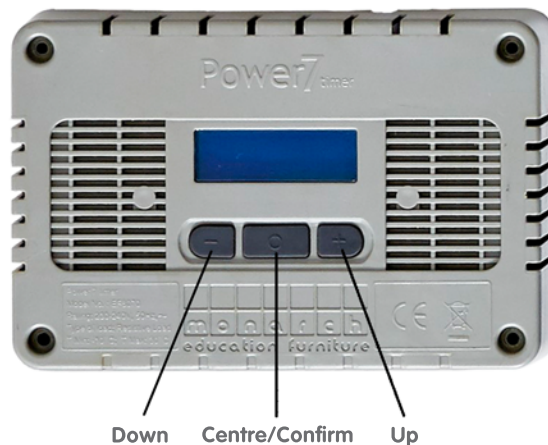

The Power 7 timer allows you to charge your devices to timing periods that are suitable to your individual needs. You have three timer functions available, these are:

**Always on mode** – Constant power to your devices all the time

**Manual Charge mode** – Deliver power to your devices at any time for a set amount of time

**Timed Charge mode** – Deliver power to you devices at a time suitable to your requirements for an amount of time suitable to you.

### Using your trolley for the first time

Plug the trolley into a socket with the IEC cable supplied.

### Setting Time & Date

When the Power 7 is powered up, the main screen will display the time and date. If the time and date is incorrect, this can be adjusted by following the next few steps.

- Press and hold the three control buttons for 5 seconds
  - Set Clock? – Yes
  - Use the + & - buttons to scroll through and select the correct date. Press the centre button to confirm
  - Use the + & - buttons to scroll through and select the correct time. Press the centre button to confirm
- Clock setting is now complete

### Always on mode

- Press and hold the centre button for 5 seconds
  - Always on? – Yes
- The timer is now set in always on mode.
- To exit the always on mode, press and hold the centre button for 5 seconds
  - Always on? – No
  - Set manual time? – press the centre button to confirm
  - Set timer 1? - Exit

### Manual charge mode

- Press and hold the centre button for 5 seconds
- Always on? – No
- Use the + & - buttons to scroll through and select the required manual charge timer duration required to a maximum of 7 hrs 59 minutes. Press the centre button to confirm,
- Set Timer 1? – Exit
- Set timer is now set
- Press and hold the + & - buttons together for 5 seconds to start manual charging
- To exit manual charge mode, press and hold the central button for 5 seconds

### Timed charge mode

- Press and hold the centre button for 5 seconds
- Always on? – No
- Set manual time – press the centre button
- Set timer 1? – Yes
- Select timer start time for Sunday using the + & - buttons to scroll through
- Use the + & - buttons to scroll through a suitable timing duration. If the timer is not required, press and hold the + & - buttons together to turn the timer off.
- Press the middle button to confirm
- Repeat the above process to programme timers for the rest of you week.
- The above process can be repeated for timer 2 and timer 3.

**Important Note: A temperature sensor has been fitted to this LapCabby / UniCabby unit, power will cut out if the temperature inside the unit exceeds 35°C (95°F) and will resume charging at approximately 29°C (84°F)**

## General Safety Precautions

**IMPORTANT:** The socket outlet shall be installed or situated near the equipment and shall be easily accessible.

The UniCabby should never be used on any inclined surface.

Always ensure that all the doors are fully closed and locked and that the power has been disconnected before moving the UniCabby.  
Forcing the front door beyond 90 degrees and the rear door beyond 100 degrees will cause damage to the hinges.

This unit is designed for storage and re-charging purposes only.  
This unit is specifically designed for use with tablets / Chromebooks /laptops and their factory supplied AC adaptors, they should not be used with any other equipment.  
Do not leave the unit unattended in areas where children may have access.

The brakes on the castors should be operated to prevent movement and the doors should be locked and the key removed whenever the unit is parked, unattended or charging.  
Always disconnect the UniCabby from the wall outlet before opening the doors or altering the AC adaptor configuration.

When the UniCabby is unplugged from the mains outlet you should ensure that the outlet is switched off wherever possible.

To avoid risk of electric shock or fire the unit should only be used by a competent adult.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

The mains power lead must not be pulled on to move the UniCabby. When moving the UniCabby the mains cable should be stored inside the UniCabby to avoid damage.

Inspect the plug and power lead on a daily basis, if the plug and power lead is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

UniCabby units are supplied with two braked and two unbraked castors to allow you to move your UniCabby at any time and are intended for indoor use only (carpet, wood or tiled floors). Movement across bitumen, tarmac, concrete and rough surfaces is not recommended and doing so will void any warranty claims for damage to the wheels.

When moving your UniCabby between floors it is strongly recommended that the unit is transported via a lift or ramp. Do not wheel the UniCabby up/down stairs as this will cause damage to the unit.

The UniCabby and Power 7 should be used in a dry environment and at normal room temperatures. No water or moisture must be allowed into the unit. The UniCabby must not be used outdoors. The UniCabby should not be moved across any external areas unless the weather is warm and dry. If it is unavoidable then this should only be done in dry conditions and the UniCabby must be allowed to stand in normal room conditions for at least four hours before it is connected to any tablets or supply sockets.

The power extension strips inside this unit are to be used for the recharging of tablet / Chromebooks /laptops only and no other purpose.  
The use of the extension strips for recharging or powering any other equipment will invalidate the warranty (with the exception of factory fitted optional extras).

### Safety Precautions for the Power 7 Timer

**Important** the **total** load on any power extension strip must not exceed 6amps and the **total** load on ALL power extension strips must not exceed 12amps.

**Important** the **total** load on any power extension strip must not exceed 6amps and the **total** load on ALL power extension strips and auxiliary socket when fitted must not exceed 12amps. (Auxiliary socket is a factory fit option)

**Important** - The Power 7 has a Lithium Manganese Battery backup for the timer functions, the Battery is permanently fixed to the PCB and is a factory replacement item. No attempt should be made under any circumstances to remove the battery from the circuit board any attempt to fit an incorrect type of Battery could lead to an explosion.

Before any cleaning of the plastic casing the plug must be removed from the mains socket. Cleaning of the plastic casing should only be done using a clean dry cloth. No liquid detergents or aerosol cleaners are to be used.



**DANGER!**  
**RISK OF ELECTRIC SHOCK**  
**DANGER! ELECTRICAL CORDS**  
**CAN BE HAZARDOUS**  
**MISUSE CAN RESULT IN FIRE**  
**OR DEATH BY ELECTRIC SHOCK**

## Technical Data Sheet

Degree of protection against ingress of solid objects, dust and water: IPX0

Degree of protection against electric shock: **Insulation-encased Class I control**

Degree of pollution: **2**

Nature of supply: ~

Rated mains supply voltage: **UK: 220-240V**  
**Aus: 230V**  
**Euro: 230V**  
**US: 115V**  
**South Africa: 230V**

Rated frequency: **UK: 50Hz**  
**Aus: 50Hz**  
**Euro: 50Hz**  
**US: 60Hz**  
**South Africa: 50Hz**

Max. current applies to UniCabby units with powerstrips only:

**12A : Total load on all Power Extension Strips**  
**6A : Total load on any single Power Extension Strip**

Rated impulse to withstand voltage: **2.5KV**

Type of power connection:

**UK:** Detachable mains power lead with UK 3 pin plug and C19 Connector  
**Aus:** Detachable mains power lead with Australia 3 pin plug and C13 Connector (AS/NZS 3112:2004)  
**Euro:** Detachable mains power lead with Schuko type plug and C13 Connector  
**US:** Detachable mains power lead with Nema 5 - 15P and C19 Connector  
**South Africa:** Detachable mains power lead 15 amp round 3 pin plug and C19 Connector

Max. conductor size: **UK, Australian and Euro: 1.5 mm<sup>2</sup>**  
**US: 2.08mm<sup>2</sup>**

### Operating Temperature:

We recommend 5 degrees - 33 degrees Celsius, the unit will automatically switch off at 35 degrees Celsius and will switch back on at 29 degrees Celsius, this is to protect the Laptop Battery.

**Cooling condition:** Natural Convection plus automatic extractor fans.

### Correct disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU, US and Australia. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

### EQUIPMENT MUST BE SUPPLIED FROM EARTHED / GROUNDED SUPPLY

High Touch current can result from the summation of the touch currents of each of the devices plugged into the unit.

To protect against a hazard the connection to protective earth should be reliable. The equipment supply connection (mains plug, mains cable and inlet) must be annually inspected / checked for signs defects or excessive wear and replaced where necessary.

